

GENERAL NOTES

- *SEAL ALL TYVEK® JOINTS AND PENETRATIONS WITH APPROVED TAPE.
(ex. DUPONT™ CONTRACTOR TAPE).
- *FASTEN TYVEK® TO SHEATHING WITH LARGE HEAD NAILS
OR USE NAILS WITH LARGE PLASTIC WASHER HEADS. (ex. DUPONT™ WRAPCAPS)
- *LOCAL LAWS, ZONING, AND BUILDING CODES VARY AND
THEREFORE GOVERNS OVER MATERIAL SELECTION AND DETAILING SHOWN BELOW.

CANTILEVERED FLOOR

METAL SOFFIT

TYVEK® HOMEWRAP®

PLYWOOD SHEATHING

WOOD JOISTS

w/ R28 BATT INSULATION (MINIMUM)

5/8" T & G PLYWOOD SUB-FLOOR

TYPICAL WALL

WOOD SIDING

WOOD FURRING

TYVEK® HOMEWRAP®

7/16" PLYWOOD SHEATHING

2"x4" WOOD STUDS

w/ R-13 BATT INSULATION

1/2" GYPSUM BOARD

LAP 6" AND TAPE TYVEK®

FROM WALL

OVER TYVEK® FROM


EXPOSED FLOOR

INSECT SCREEN

LAP AND TAPE TYVEK® AT JOINTS

(UPPER SHEET OVER LOWER SHEET)

TYPICAL WALL

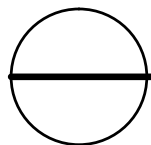

CANTILEVERED FLOOR DETAIL

RESIDENTIAL WOOD FRAME STRUCTURE w/ WOOD SIDING (COOLING CLIMATE)