


NOTE:
MECHANICALLY FASTEN **DUPONT™ TYVEK®** TO CONCRETE COLUMN IF NECESSARY TO MAINTAIN RECOMMENDED FASTENER SPACING.

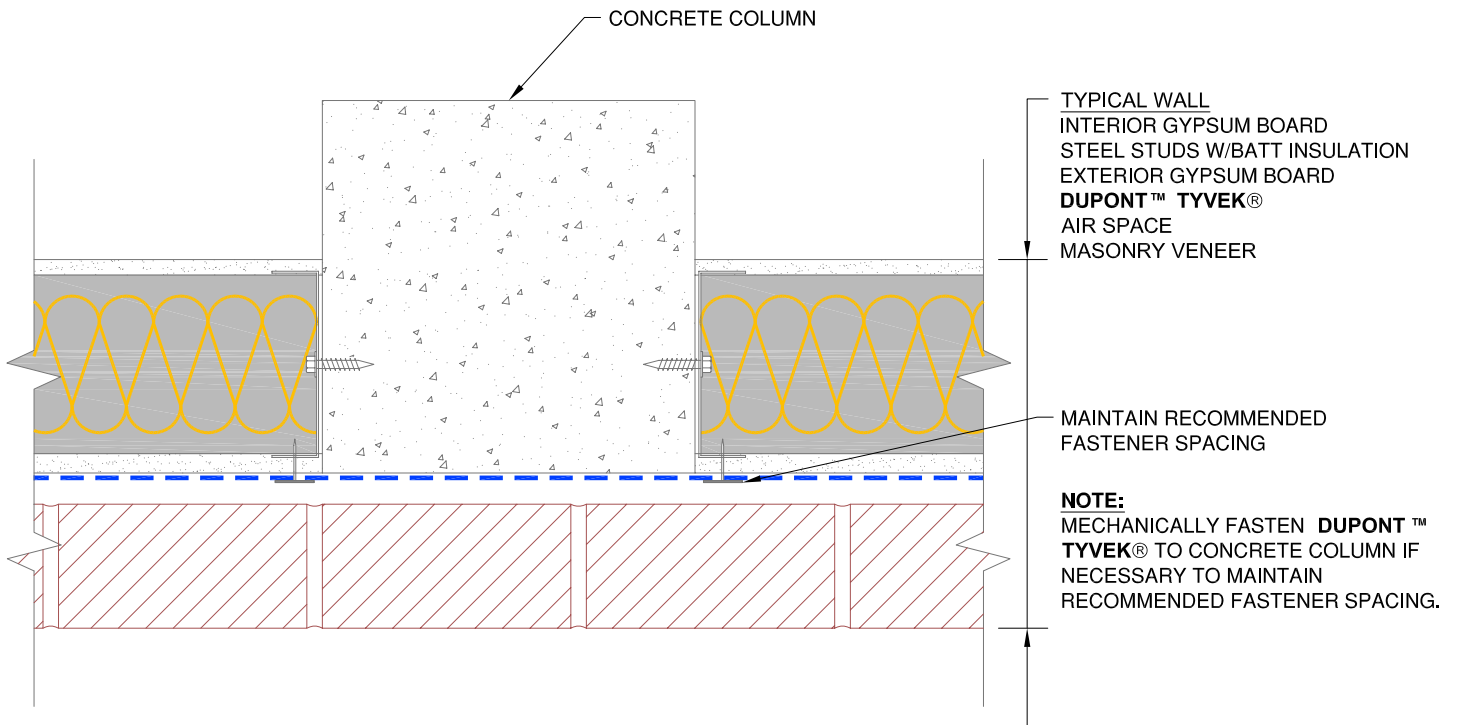

NOTE:
MECHANICALLY FASTEN **DUPONT™ TYVEK®** TO CONCRETE COLUMN IF NECESSARY TO MAINTAIN RECOMMENDED FASTENER SPACING.

BRICK - CONCRETE COLUMN TRANSITION (METHOD 1)

- SEAL ALL DUPONT™ TYVEK® SEAMS AND REPAIR MINOR HOLES WITH DUPONT™ TYVEK® TAPE.
- FASTEN DUPONT™ TYVEK® WITH APPROVED FASTENERS AND SPACING.
- INTERIOR VAPOR RETARDER MAY BE REQUIRED IN SOME REGIONS.
- LOCAL LAWS, ZONING, AND BUILDING CODES VARY AND THEREFORE GOVERN OVER MATERIAL SELECTION AND DETAILING SHOWN ABOVE.
- EXTERIOR INSULATION MAY BE APPLIED IN FRONT OR BEHIND DUPONT™ TYVEK® LAYER.



Tyvek.