

## GENERAL NOTES

- \*SEAL ALL TYVEK® JOINTS AND PENETRATIONS WITH APPROVED TAPE.  
(ex. DUPONT™ CONTRACTOR TAPE).
- \*FASTEN TYVEK® TO SHEATHING WITH LARGE HEAD NAILS  
OR USE NAILS WITH LARGE PLASTIC WASHER HEADS. (ex. DUPONT™ WRAPCAPS)
- \*LOCAL LAWS, ZONING, AND BUILDING CODES VARY AND  
THEREFORE GOVERNS OVER MATERIAL SELECTION AND DETAILING SHOWN BELOW.

### CANTILEVERED FLOOR

METAL SOFFIT

TYVEK® HOMEWRAP®

PLYWOOD SHEATHING

WOOD JOISTS

w/ R28 BATT INSULATION (MINIMUM)

5/8" T & G PLYWOOD SUB-FLOOR

### TYPICAL WALL

WOOD SIDING

WOOD FURRING

TYVEK® HOMEWRAP®

7/16" PLYWOOD SHEATHING

2"x4" WOOD STUDS

w/ R-13 BATT INSULATION

1/2" GYPSUM BOARD

LAP 6" AND TAPE TYVEK®

FROM WALL

OVER TYVEK® FROM


EXPOSED FLOOR

INSECT SCREEN

LAP AND TAPE TYVEK® AT JOINTS

(UPPER SHEET OVER LOWER SHEET)

TYPICAL WALL

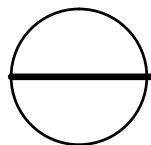

## CANTILEVERED FLOOR DETAIL

RESIDENTIAL WOOD FRAME STRUCTURE w/ WOOD SIDING (COOLING CLIMATE)